



## **Dog House**

### **Operation Instructions**

#### **Model**

DH200



The Dog House unit is intended for commercial use only. Operators should be trained to follow the use and care guidelines in the pamphlet before initial start up.

The Dog House is equipped for alternating current. Do not connect to direct current.

## **SECTION I**

### **General Operating Procedures**

- Remove the white protective liners off of the false bottoms that are located in the pans
- Remove the bags off of the pans
- Plug the Dog House into an 110V AC outlet.
- Push the power switch to the on position. The switch is behind the hinged door on the left hand side. The switch will light up indicating the unit is on.

### **Cooking Options**

#### **Option 1**

- 1) Preheat unit on “HIGH” for one hour
- 2) Load thawed Hot Dogs in to the Dog House
- 3) Heat on “HIGH” setting for 45 minutes then turn control to “HOLD” setting  
(8 to 1 Hot Dogs will be approximately 140 degrees)  
(5 to 1 Hot Dogs will be approximately 130 degrees)
- 4) Hold Hot Dogs until ready to load onto the Roller Grill

#### **Option 2**

- 1) Preheat unit on “HIGH” for one hour
- 2) Load thawed Hot Dogs into the unit and turn the control knob to the “HOLD” setting
- 3) Hold Hot Dogs until ready to load onto the Roller Grill  
(Hot Dogs will take approximately 3 hours to reach 140 degrees from this point)

## **SECTION II**

### **Cleaning and Maintenance**

#### **\*CAUTION\***

**The Dog House unit gets very hot under normal operation. Extreme care must be taken when touching the metal surfaces. Make sure the unit is fully cooled before attempting to clean any part of the unit.**

The Dog House comes with removable perforated false bottoms, pans and lids. Remove the false bottoms, pans and lids and wash them with warm soapy water. Wipe the pieces dry with a clean cloth before reinstalling them in the unit. Do not use chlorinated cleaning agents, as they will cause discoloration of the stainless steel surfaces.

The stainless outer surfaces of Dog House can be cleaned with a soft damp cloth and a stainless cleaner. Never use abrasive detergents, petrol, alcohol or solvents on these surfaces

## **FREIGHT DAMAGE CLAIMS:**

Your Creative Serving equipment was carefully inspected and packed before leaving our factory. The transportation company assumes full responsibility for safe delivery of this equipment. Creative Serving Inc. cannot assume responsibilities for damage or loss incurred in transit. Visible damage or loss should be noted on freight bill and signed by person making delivery.

A freight claim should be filed immediately with the transportation company. If damage is unnoticed or concealed until equipment is unpacked, notify the transportation company immediately and tell them you want to file a **concealed damage claim**. This must be done within fifteen (15) days after delivery was made. Be sure to retain all packaging material and cartons.

## **LIMITED WARRANTY 90 DAYS PARTS & LABOR**

Creative Serving Inc. warrants to the purchaser of this product that the same shall be free from defects in material and workmanship for a period of 90 days from the original purchase date of the equipment. During this period of time, Creative Serving Inc. will repair or replace all defective parts.

Verbal or written authorization must be secured for on site service or prior to return of product for warranty service.

Out of warranty service done at our factory will be done at a rate of \$20.00 per hour and all inbound and outbound freight costs are the sole responsibility of the purchaser. Replacement parts will be billed at the dealer cost, refer to your parts list.

This warranty does not apply to any equipment or component parts that have been subject to shipping damage, improper voltage, improper installation, alteration, abuse or misuse. The warranty does not cover any loss of food or other products, or damage to property due to electrical, or mechanical malfunction or to any incidental or consequential damages of Purchase or any third party.

To the extent allowed by law any express warranties or any implied warranties or merchantability or fitness are limited to the replacement guarantee above and any other warranty is disclaimed.



5 Stahuber Avenue  
Union, NJ 07083  
Phone: 908-688-0800  
Fax: 908-688-0718  
[www.creativeserving.com](http://www.creativeserving.com)